

DIRECTIONS #509

NOTE: The eyes of the sway bar are different than that of the O.E. bar due to the fatigue of the O.E. end-link. The bar uses an existing hole located in the lower control arm in which a standard end-link can be used. Please read before installation.

NOTE: This bar was designed to replace your original equipment sway-bar. The diameter of the bar has been increased for more roll resistance; the contours of the bar may differ slightly if some of the bends were not necessary. This kit may come with none, some or all of the hardware required to install the bar depending on the application. If hardware is not included with the kit, the hardware from the O.E bar must be retained and reused. If these parts are too worn to be reused it will be necessary to obtain them from your O.E parts dealer. If your car was not equipped with an O.E. bar, the installation of this bar may not be possible.

- Step 1.** Remove the O.E bar and retain the O.E. hardware needed for reinstalling the new sway-bar. Do not allow the suspension to hang as this will cause a binding affect and will be more difficult or impossible to remove the O.E. bar or to install the new bar.
- Step 2.** This bar was designed to mount in the same location as the O.E. bar. Install the new bar using the O.E. hardware and any supplied with this kit.
- Step 3.** On applications with end-links, tighten them until the end-link bushings just deform slightly. Do not over tighten.
- Step 4.** After installation is complete, check the suspension travel and suspension parts for any interference with the sway-bar and with other parts. On front sway bars, also, turn wheels from lock to lock to check tire clearance.
- Step 5.** Road test your car to familiarize yourself with its new handling. As we cannot supervise your installation or your driving we cannot be responsible for more than the cost of the kit. **REMEMBER!** A rear sway-bar should never be installed unless an adequate front bar is on the vehicle.

HARDWARE

| | | | | | |
|---|---------|----------|---|---------|-----------|
| 2 | RH 031 | Plates | 2 | RH 072w | Brackets |
| 2 | UB 615W | Bushings | 2 | RH 016u | End-links |
| 4 | RH 104 | Washers | | | |