

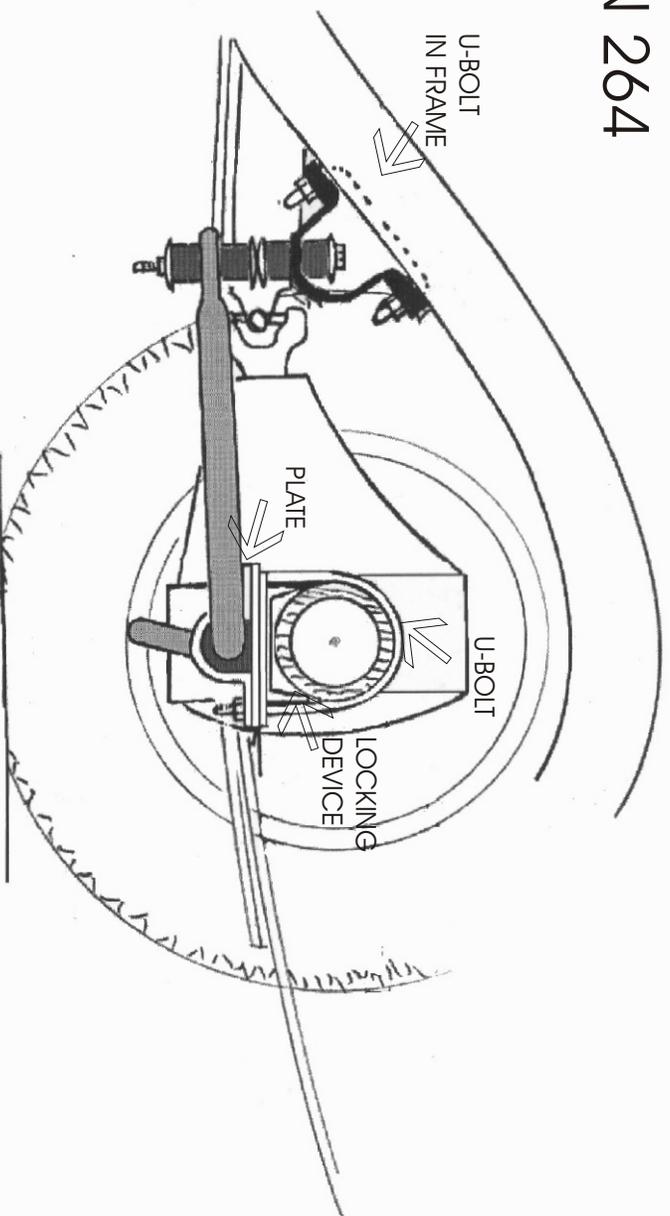
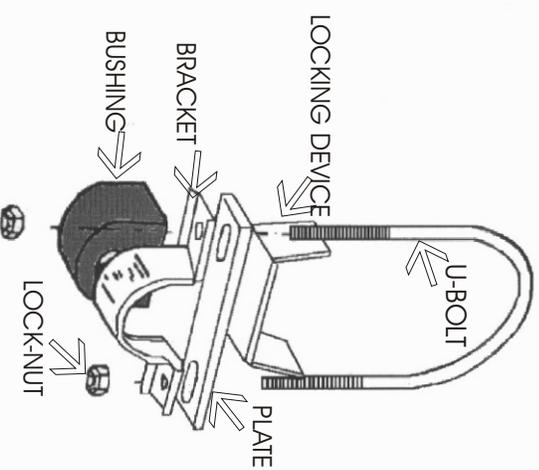


DIRECTION 264

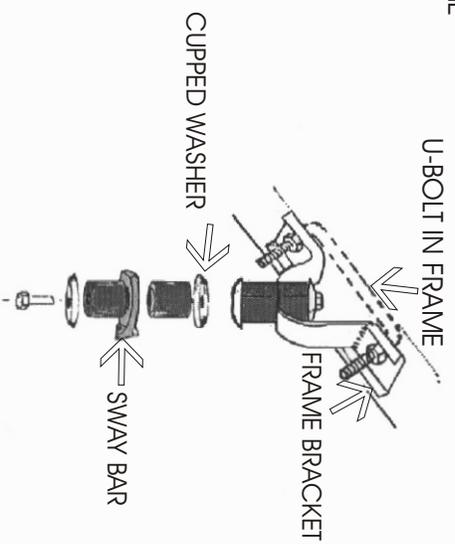

HOW TO INSTALL A 402 U-BOLT

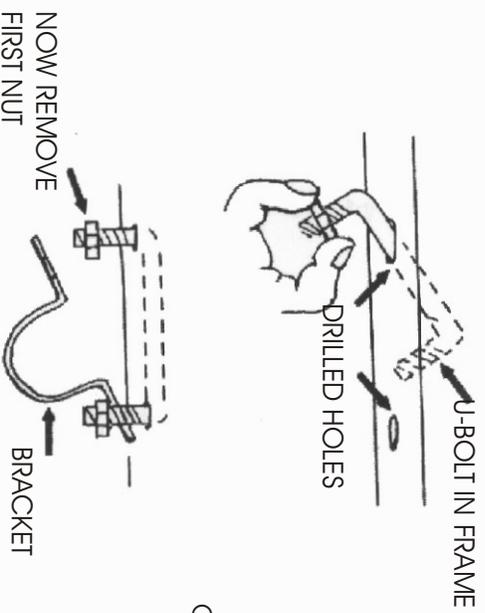

405 U-BOLT SETUP

Direction #264

- Step #1.** Hang the U-bolts around the axle. Be sure they are passed under the brake line so as not to pinch them. Raise up the slotted plates under the U-bolt to engage the U-bolt legs. Follow with the bar bracket that should already be around the bar. Start the nuts. Place the mid-section bushing on the bar near the bends, flat side up. Next, slide the loosely assembled bolt and bracket assembly down the axle so that the bracket is around the bushing. Insert the locking device from one side with the legs toward the axle. Center on the slotted plate. The bar dip should be under the differential, and the arms should be forward.
- Step #2.** Assemble the end-link as illustrated. Be sure that the washers have their cupped or hollow side facing towards the bushing and that the bushings have the end with the stepped surface towards the bracket or bar eye. Tighten the lock-nut so the assembly is securely snug but not so tight that the bushings bulge to a noticeable extent.
- Step #3.** Position the bar so that the forges are horizontal and the axle clamp assembly holding the bar mid-section is below the axle. With the car resting naturally on its springs on level ground, the frame brackets should position themselves so as to align with the frame bottom. Adjust the bar position relative to the axle if needed.
- Step #4.** Mark through the frame bracket holes. Drill one hole with a 3/8" drill bit. Use the square U-bolt to get the exact spacing for the second hole and drill it.
- Step #5.** Place a lock-nut on one leg of the square U-bolt. Insert the other end into one drilled hole. Maneuver it until it reappears through the other drilled hole. Place one end of the frame bracket over the leg and start another lock-nut on it. Remove the first nut, position the free end of bracket over the U-bolt leg and replace the nut.
- Step #6.** Have someone bounce the rear of the car so you can check that all parts clear throughout the suspension travel distance. If all is clear, tighten the nuts on the frame and the axle.
- Step #7.** Road test the vehicle to familiarize yourself with its new handling. As we cannot supervise your installation or your driving, we cannot be held responsible for more than the cost of the kit.

HARDWARE

2	RH 013 End-Links
2	RH 405 U-Bolts
2	RH 044 Brackets
2	RH 043 Brackets
2	RH 054 Brackets
2	RH 031 Plates
2	RH 507 Bushings
2	RH 402 U-Bolts
8	RH 304 Lock-Nuts